

SERVICE BULLETIN #35

RE: Towable Hydraulic

A pin retainer guard (Part # 37169) is being provided to prevent the pin, which attaches the tow bar to the frame, from backing out if the hairpin cotter is not properly installed.

Install the pin retainer guard by positioning the guard around the base of the mounting post and securing it with (2) 3/8" x 2-1/2" bolts and nuts as shown in figure 1.

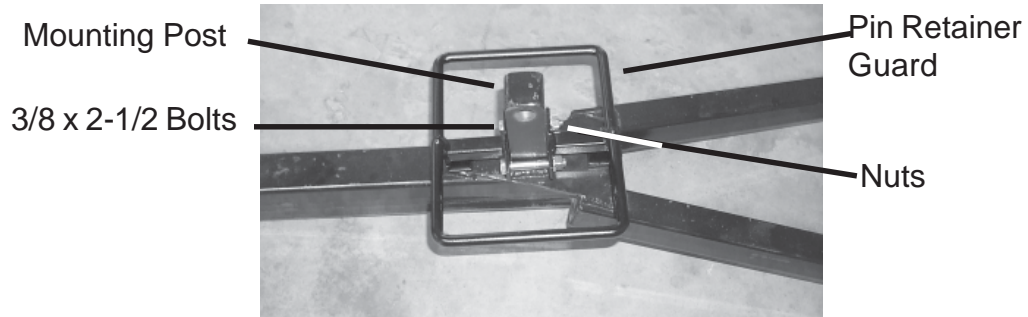


Figure 1



CAUTION: Secure the pin retainer guard so the pin freely pivots 180 degrees back and forth on both sides. Clearance between the end of the pin handle and guard must be maintained as shown in figure 2.

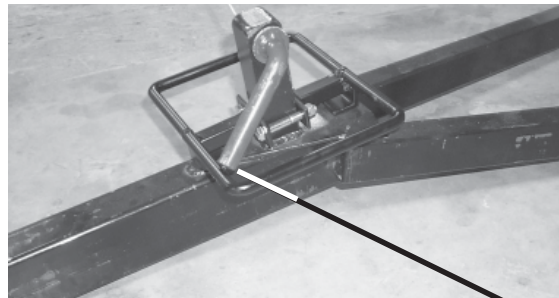


Figure 2

Clearance

With the pin retainer guard installed, the pin handle must be pivoted to a parallel position with the frame in order to insert or remove the pin. The pin handle must be pivoted down within the guard for transport.

If you have any questions, or need additional information, please call or write us at:

LITTLE BEAVER INC.

P.O. Box 840

Livingston, TX 77351

PH: 800/227-7515 FAX: 936/327-4025